


# Seat Post Mount System with rear lighting control WP200, WP203, WP206, WP209, WP253, WP255.

**COLOR CODES**

- O = Orange
- BK = Black
- BE = Blue
- R = Red
- GN = Green
- Y = Yellow
- BN = Brown
- V = Violet
- PK = Pink
- GY = Gray
- W = White
- TN = Tan
- / = Striped

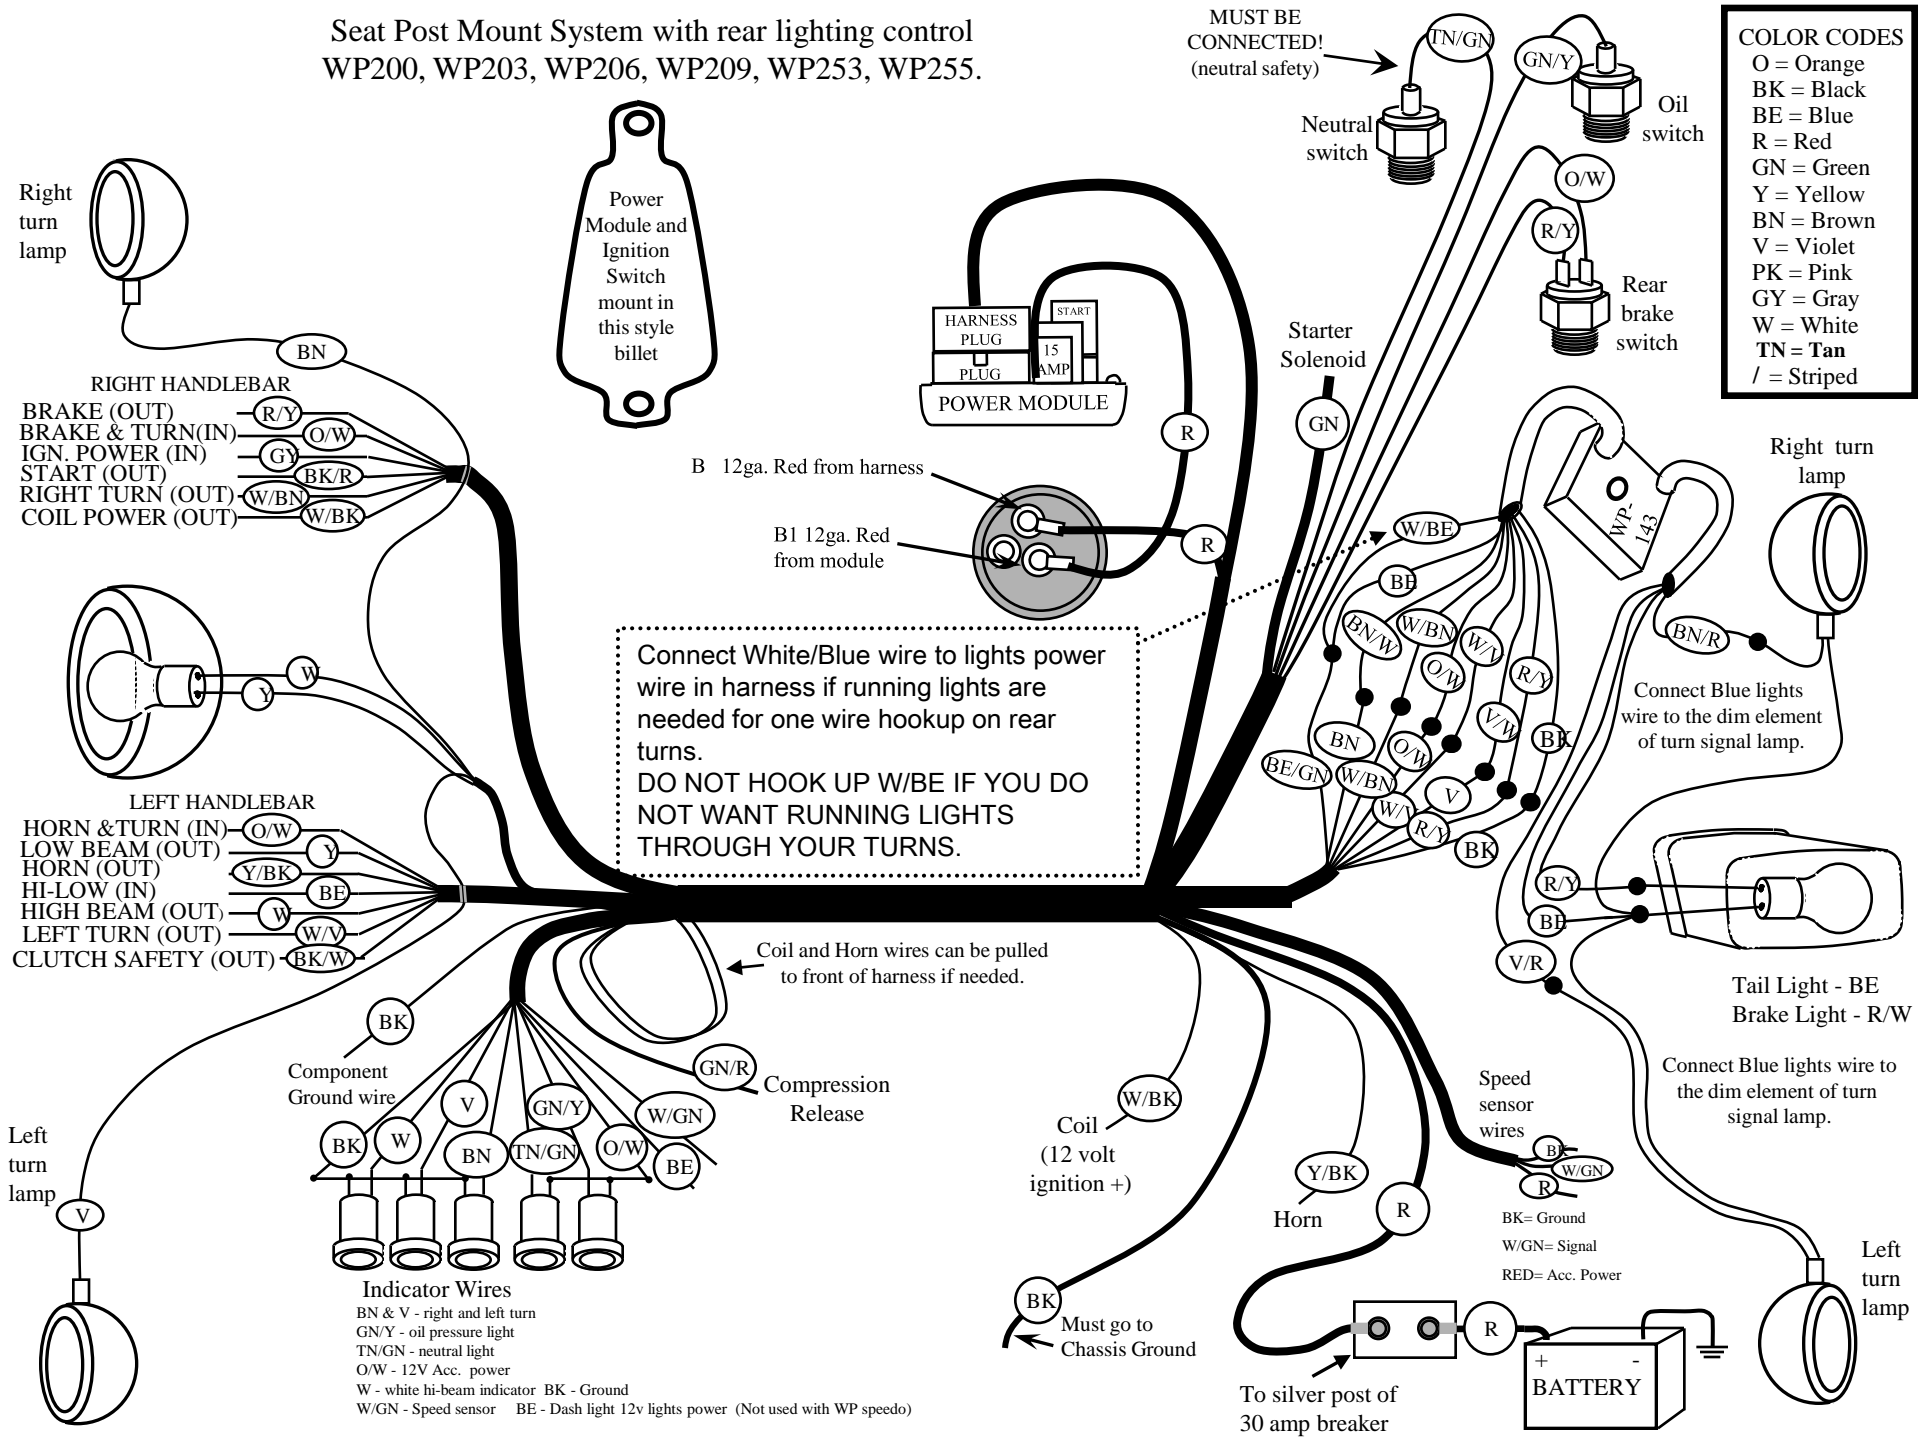

**MUST BE CONNECTED!**  
(neutral safety)

Connect White/Blue wire to lights power wire in harness if running lights are needed for one wire hookup on rear turns.  
**DO NOT HOOK UP W/BE IF YOU DO NOT WANT RUNNING LIGHTS THROUGH YOUR TURNS.**

**Indicator Wires**  
 BN & V - right and left turn  
 GN/Y - oil pressure light  
 TN/GN - neutral light  
 O/W - 12V Acc. power  
 W - white hi-beam indicator BK - Ground  
 W/GN - Speed sensor BE - Dash light 12v lights power (Not used with WP speed)

BK= Ground  
 W/GN= Signal  
 RED= Acc. Power

To silver post of 30 amp breaker

Must go to Chassis Ground

Connect Blue lights wire to the dim element of turn signal lamp.

Tail Light - BE  
 Brake Light - R/W

Connect Blue lights wire to the dim element of turn signal lamp.

B 12ga. Red from harness  
 B1 12ga. Red from module

Coil and Horn wires can be pulled to front of harness if needed.

Coil (12 volt ignition +)  
 Compression Release

Right turn lamp

Left turn lamp

Right turn lamp

Left turn lamp

RIGHT HANDLEBAR

- BRAKE (OUT)
- BRAKE & TURN(IN)
- IGN. POWER (IN)
- START (OUT)
- RIGHT TURN (OUT)
- COIL POWER (OUT)

LEFT HANDLEBAR

- HORN & TURN (IN)
- LOW BEAM (OUT)
- HORN (OUT)
- HI-LOW (IN)
- HIGH BEAM (OUT)
- LEFT TURN (OUT)
- CLUTCH SAFETY (OUT)

Component Ground wire

Indicator Wires

BN & V - right and left turn  
 GN/Y - oil pressure light  
 TN/GN - neutral light  
 O/W - 12V Acc. power  
 W - white hi-beam indicator BK - Ground  
 W/GN - Speed sensor BE - Dash light 12v lights power (Not used with WP speed)

Starter Solenoid

HARNESS PLUG  
 PLUG  
 15 AMP  
 START  
 POWER MODULE

Power Module and Ignition Switch mount in this style billet

Neutral switch

Oil switch

Rear brake switch

Starter Solenoid

Right turn lamp

Tail Light - BE  
 Brake Light - R/W

Left turn lamp

RIGHT HANDLEBAR

- BRAKE (OUT)
- BRAKE & TURN(IN)
- IGN. POWER (IN)
- START (OUT)
- RIGHT TURN (OUT)
- COIL POWER (OUT)

LEFT HANDLEBAR

- HORN & TURN (IN)
- LOW BEAM (OUT)
- HORN (OUT)
- HI-LOW (IN)
- HIGH BEAM (OUT)
- LEFT TURN (OUT)
- CLUTCH SAFETY (OUT)

Component Ground wire

Indicator Wires

BN & V - right and left turn  
 GN/Y - oil pressure light  
 TN/GN - neutral light  
 O/W - 12V Acc. power  
 W - white hi-beam indicator BK - Ground  
 W/GN - Speed sensor BE - Dash light 12v lights power (Not used with WP speed)

Starter Solenoid

HARNESS PLUG  
 PLUG  
 15 AMP  
 START  
 POWER MODULE

Power Module and Ignition Switch mount in this style billet

Neutral switch

Oil switch

Rear brake switch

Starter Solenoid

Right turn lamp

Tail Light - BE  
 Brake Light - R/W

Left turn lamp

RIGHT HANDLEBAR

- BRAKE (OUT)
- BRAKE & TURN(IN)
- IGN. POWER (IN)
- START (OUT)
- RIGHT TURN (OUT)
- COIL POWER (OUT)

LEFT HANDLEBAR

- HORN & TURN (IN)
- LOW BEAM (OUT)
- HORN (OUT)
- HI-LOW (IN)
- HIGH BEAM (OUT)
- LEFT TURN (OUT)
- CLUTCH SAFETY (OUT)

Component Ground wire

Indicator Wires

BN & V - right and left turn  
 GN/Y - oil pressure light  
 TN/GN - neutral light  
 O/W - 12V Acc. power  
 W - white hi-beam indicator BK - Ground  
 W/GN - Speed sensor BE - Dash light 12v lights power (Not used with WP speed)

Starter Solenoid

HARNESS PLUG  
 PLUG  
 15 AMP  
 START  
 POWER MODULE

Power Module and Ignition Switch mount in this style billet

Neutral switch

Oil switch

Rear brake switch

Starter Solenoid

Right turn lamp

Tail Light - BE  
 Brake Light - R/W

Left turn lamp

RIGHT HANDLEBAR

- BRAKE (OUT)
- BRAKE & TURN(IN)
- IGN. POWER (IN)
- START (OUT)
- RIGHT TURN (OUT)
- COIL POWER (OUT)

LEFT HANDLEBAR

- HORN & TURN (IN)
- LOW BEAM (OUT)
- HORN (OUT)
- HI-LOW (IN)
- HIGH BEAM (OUT)
- LEFT TURN (OUT)
- CLUTCH SAFETY (OUT)

Component Ground wire

Indicator Wires

BN & V - right and left turn  
 GN/Y - oil pressure light  
 TN/GN - neutral light  
 O/W - 12V Acc. power  
 W - white hi-beam indicator BK - Ground  
 W/GN - Speed sensor BE - Dash light 12v lights power (Not used with WP speed)

Starter Solenoid

HARNESS PLUG  
 PLUG  
 15 AMP  
 START  
 POWER MODULE

Power Module and Ignition Switch mount in this style billet

Neutral switch

Oil switch

Rear brake switch

Starter Solenoid

Right turn lamp

Tail Light - BE  
 Brake Light - R/W

Left turn lamp

RIGHT HANDLEBAR

- BRAKE (OUT)
- BRAKE & TURN(IN)
- IGN. POWER (IN)
- START (OUT)
- RIGHT TURN (OUT)
- COIL POWER (OUT)

LEFT HANDLEBAR

- HORN & TURN (IN)
- LOW BEAM (OUT)
- HORN (OUT)
- HI-LOW (IN)
- HIGH BEAM (OUT)
- LEFT TURN (OUT)
- CLUTCH SAFETY (OUT)

Component Ground wire

Indicator Wires

BN & V - right and left turn  
 GN/Y - oil pressure light  
 TN/GN - neutral light  
 O/W - 12V Acc. power  
 W - white hi-beam indicator BK - Ground  
 W/GN - Speed sensor BE - Dash light 12v lights power (Not used with WP speed)

Starter Solenoid

HARNESS PLUG  
 PLUG  
 15 AMP  
 START  
 POWER MODULE

Power Module and Ignition Switch mount in this style billet

Neutral switch

Oil switch

Rear brake switch

Starter Solenoid

Right turn lamp

Tail Light - BE  
 Brake Light - R/W

Left turn lamp

RIGHT HANDLEBAR

- BRAKE (OUT)
- BRAKE & TURN(IN)
- IGN. POWER (IN)
- START (OUT)
- RIGHT TURN (OUT)
- COIL POWER (OUT)

LEFT HANDLEBAR

- HORN & TURN (IN)
- LOW BEAM (OUT)
- HORN (OUT)
- HI-LOW (IN)
- HIGH BEAM (OUT)
- LEFT TURN (OUT)
- CLUTCH SAFETY (OUT)

Component Ground wire

Indicator Wires

BN & V - right and left turn  
 GN/Y - oil pressure light  
 TN/GN - neutral light  
 O/W - 12V Acc. power  
 W - white hi-beam indicator BK - Ground  
 W/GN - Speed sensor BE - Dash light 12v lights power (Not used with WP speed)

Starter Solenoid

HARNESS PLUG  
 PLUG  
 15 AMP  
 START  
 POWER MODULE

Power Module and Ignition Switch mount in this style billet

Neutral switch

Oil switch

Rear brake switch

Starter Solenoid

Right turn lamp

Tail Light - BE  
 Brake Light - R/W

Left turn lamp

RIGHT HANDLEBAR

- BRAKE (OUT)
- BRAKE & TURN(IN)
- IGN. POWER (IN)
- START (OUT)
- RIGHT TURN (OUT)
- COIL POWER (OUT)

LEFT HANDLEBAR

- HORN & TURN (IN)
- LOW BEAM (OUT)
- HORN (OUT)
- HI-LOW (IN)
- HIGH BEAM (OUT)
- LEFT TURN (OUT)
- CLUTCH SAFETY (OUT)

Component Ground wire

Indicator Wires

BN & V - right and left turn  
 GN/Y - oil pressure light  
 TN/GN - neutral light  
 O/W - 12V Acc. power  
 W - white hi-beam indicator BK - Ground  
 W/GN - Speed sensor BE - Dash light 12v lights power (Not used with WP speed)

Starter Solenoid

HARNESS PLUG  
 PLUG  
 15 AMP  
 START  
 POWER MODULE

Power Module and Ignition Switch mount in this style billet

Neutral switch

Oil switch

Rear brake switch

Starter Solenoid

Right turn lamp

Tail Light - BE  
 Brake Light - R/W

Left turn lamp

RIGHT HANDLEBAR

- BRAKE (OUT)
- BRAKE & TURN(IN)
- IGN. POWER (IN)
- START (OUT)
- RIGHT TURN (OUT)
- COIL POWER (OUT)

LEFT HANDLEBAR

- HORN & TURN (IN)
- LOW BEAM (OUT)
- HORN (OUT)
- HI-LOW (IN)
- HIGH BEAM (OUT)
- LEFT TURN (OUT)
- CLUTCH SAFETY (OUT)

Component Ground wire

Indicator Wires

BN & V - right and left turn  
 GN/Y - oil pressure light  
 TN/GN - neutral light  
 O/W - 12V Acc. power  
 W - white hi-beam indicator BK - Ground  
 W/GN - Speed sensor BE - Dash light 12v lights power (Not used with WP speed)

Starter Solenoid

HARNESS PLUG  
 PLUG  
 15 AMP  
 START  
 POWER MODULE

Power Module and Ignition Switch mount in this style billet

Neutral switch

Oil switch

Rear brake switch

Starter Solenoid

Right turn lamp

Tail Light - BE  
 Brake Light - R/W

Left turn lamp

RIGHT HANDLEBAR

- BRAKE (OUT)
- BRAKE & TURN(IN)
- IGN. POWER (IN)
- START (OUT)
- RIGHT TURN (OUT)
- COIL POWER (OUT)

LEFT HANDLEBAR

- HORN & TURN (IN)
- LOW BEAM (OUT)
- HORN (OUT)
- HI-LOW (IN)
- HIGH BEAM (OUT)
- LEFT TURN (OUT)
- CLUTCH SAFETY (OUT)

Component Ground wire

Indicator Wires

BN & V - right and left turn  
 GN/Y - oil pressure light  
 TN/GN - neutral light  
 O/W - 12V Acc. power  
 W - white hi-beam indicator BK - Ground  
 W/GN - Speed sensor BE - Dash light 12v lights power (Not used with WP speed)

Starter Solenoid

HARNESS PLUG  
 PLUG  
 15 AMP  
 START  
 POWER MODULE

Power Module and Ignition Switch mount in this style billet

Neutral switch

Oil switch

Rear brake switch

Starter Solenoid

Right turn lamp

Tail Light - BE  
 Brake Light - R/W

Left turn lamp

RIGHT HANDLEBAR

- BRAKE (OUT)
- BRAKE & TURN(IN)
- IGN. POWER (IN)
- START (OUT)
- RIGHT TURN (OUT)
- COIL POWER (OUT)

LEFT HANDLEBAR

- HORN & TURN (IN)
- LOW BEAM (OUT)
- HORN (OUT)
- HI-LOW (IN)
- HIGH BEAM (OUT)
- LEFT TURN (OUT)
- CLUTCH SAFETY (OUT)

Component Ground wire

Indicator Wires

BN & V - right and left turn  
 GN/Y - oil pressure light  
 TN/GN - neutral light  
 O/W - 12V Acc. power  
 W - white hi-beam indicator BK - Ground  
 W/GN - Speed sensor BE - Dash light 12v lights power (Not used with WP speed)

Starter Solenoid

HARNESS PLUG  
 PLUG  
 15 AMP  
 START  
 POWER MODULE

Power Module and Ignition Switch mount in this style billet

Neutral switch

Oil switch

Rear brake switch

Starter Solenoid

Right turn lamp

Tail Light - BE  
 Brake Light - R/W

Left turn lamp

RIGHT HANDLEBAR

- BRAKE (OUT)
- BRAKE & TURN(IN)
- IGN. POWER (IN)
- START (OUT)
- RIGHT TURN (OUT)
- COIL POWER (OUT)

LEFT HANDLEBAR

- HORN & TURN (IN)
- LOW BEAM (OUT)
- HORN (OUT)
- HI-LOW (IN)
- HIGH BEAM (OUT)
- LEFT TURN (OUT)
- CLUTCH SAFETY (OUT)

Component Ground wire

Indicator Wires

BN & V - right and left turn  
 GN/Y - oil pressure light  
 TN/GN - neutral light  
 O/W - 12V Acc. power  
 W - white hi-beam indicator BK - Ground  
 W/GN - Speed sensor BE - Dash light 12v lights power (Not used with WP speed)

Starter Solenoid

HARNESS PLUG  
 PLUG  
 15 AMP  
 START  
 POWER MODULE

Power Module and Ignition Switch mount in this style billet

Neutral switch

Oil switch

Rear brake switch

Starter Solenoid

Right turn lamp

Tail Light - BE  
 Brake Light - R/W

Left turn lamp

RIGHT HANDLEBAR

- BRAKE (OUT)
- BRAKE & TURN(IN)
- IGN. POWER (IN)
- START (OUT)
- RIGHT TURN (OUT)
- COIL POWER (OUT)

LEFT HANDLEBAR

- HORN & TURN (IN)
- LOW BEAM (OUT)
- HORN (OUT)
- HI-LOW (IN)
- HIGH BEAM (OUT)
- LEFT TURN (OUT)
- CLUTCH SAFETY (OUT)

Component Ground wire

Indicator Wires

BN & V - right and left turn  
 GN/Y - oil pressure light  
 TN/GN - neutral light  
 O/W - 12V Acc. power  
 W - white hi-beam indicator BK - Ground  
 W/GN - Speed sensor BE - Dash light 12v lights power (Not used with WP speed)