


# WP105

- Standard harness wires
- Optional harness wires (in kit)

**KEY SWITCH**  
 R = Battery 12v +  
 GN = Start Solenoid  
 R = Ignition and Lights 12v +

**COLOR CODES**  
 O = Orange  
 BK = Black  
 BE = Blue  
 R = Red  
 GN = Green  
 Y = Yellow  
 BN = Brown  
 V = Violet  
 PK = Pink  
 GY = Gray  
 W = White  
 / = Striped

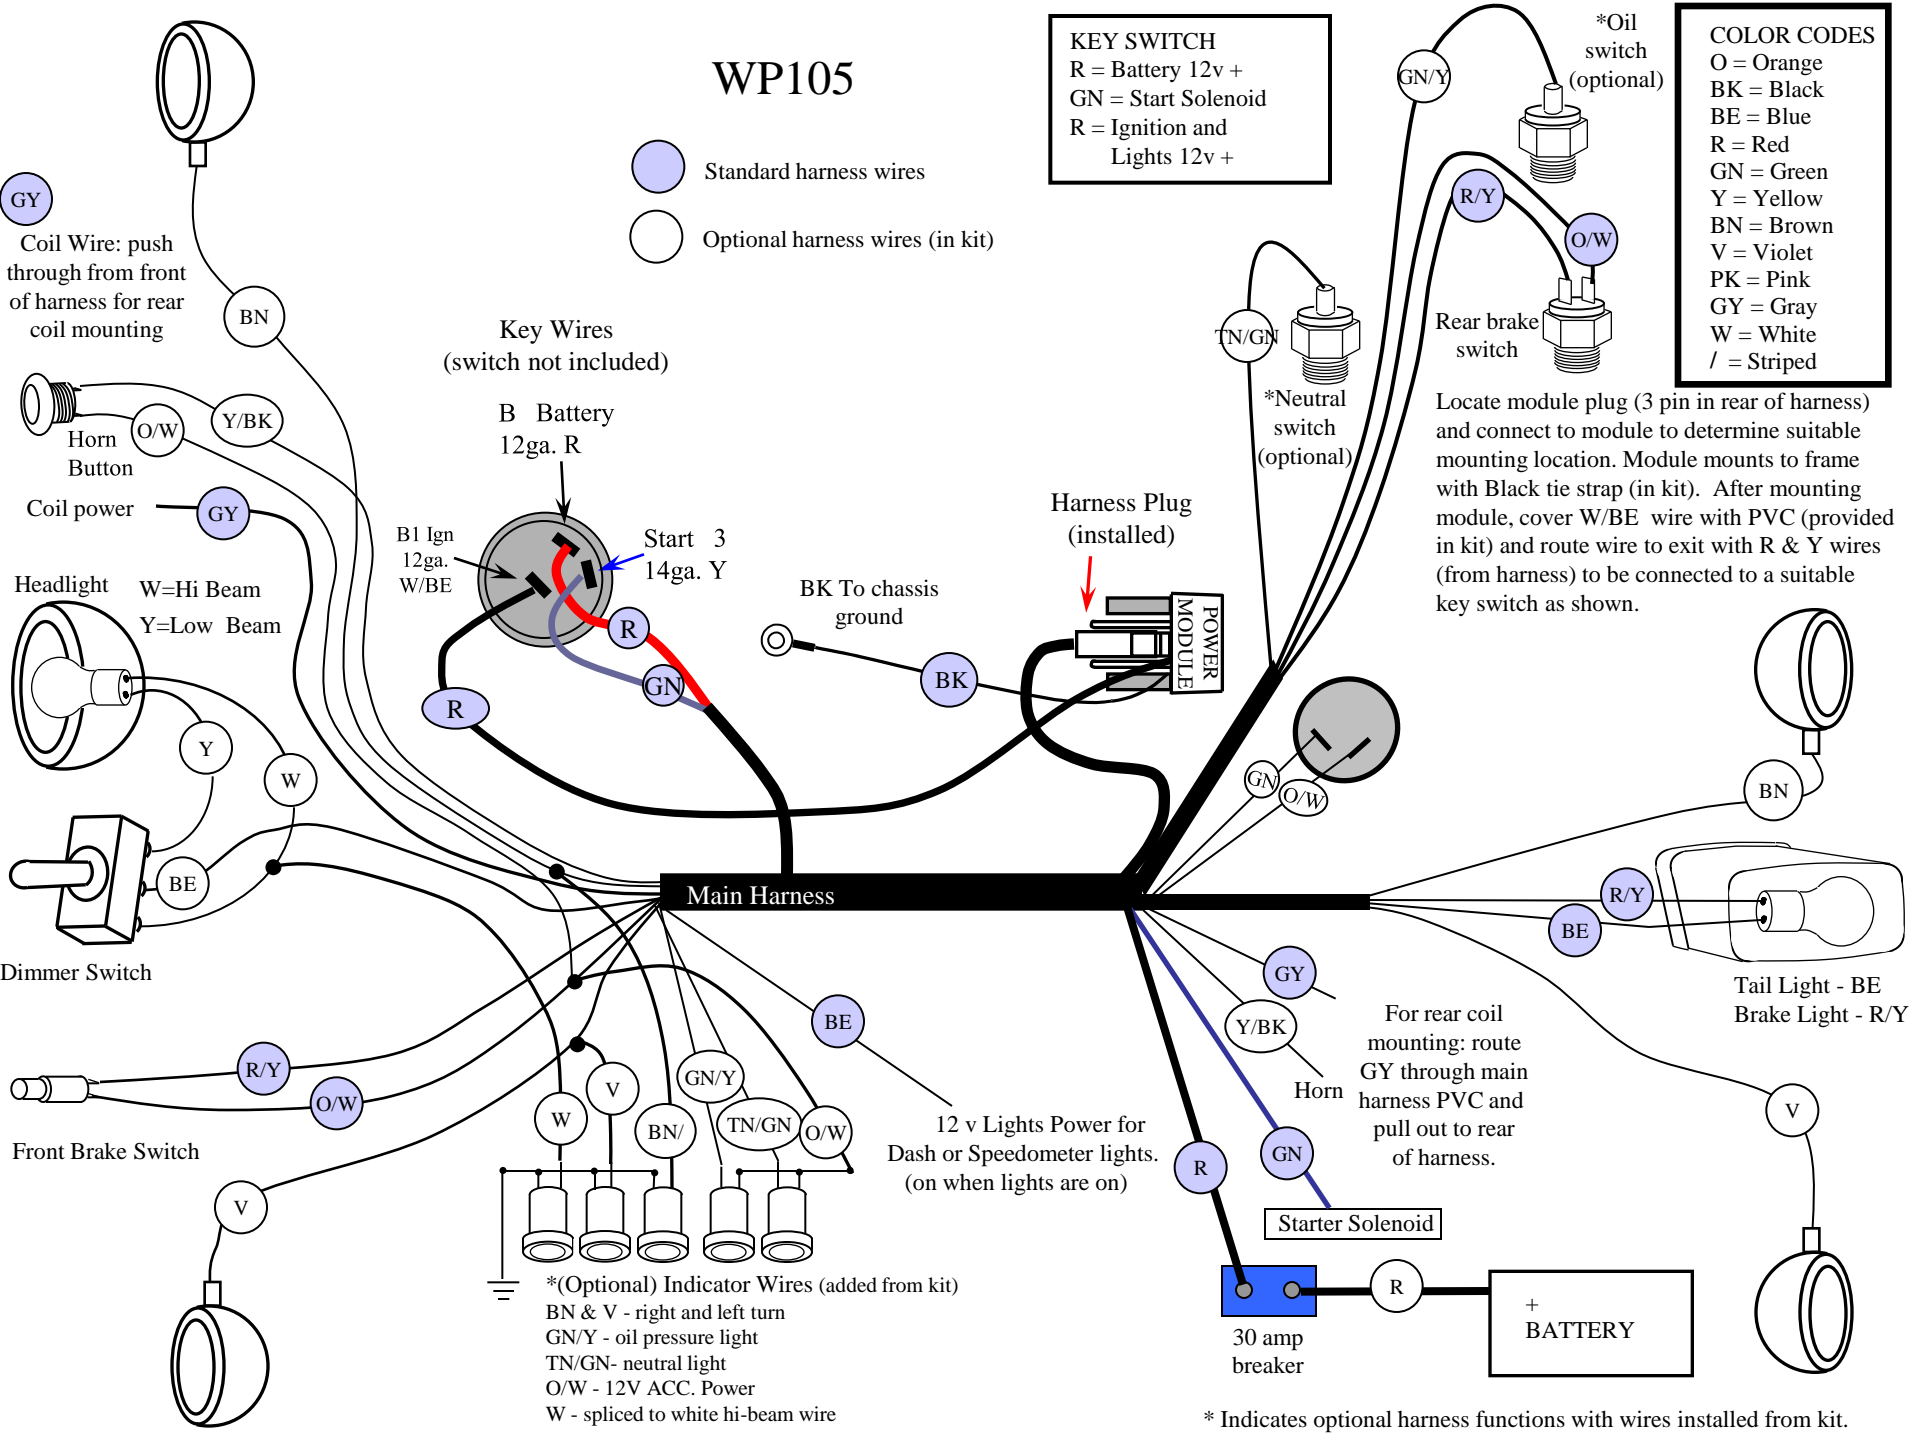

**Key Wires**  
 (switch not included)

B Battery 12ga. R  
 Start 3 14ga. Y  
 B1 Ign 12ga. W/BE

**Main Harness**

**Horn Plug**  
 (installed)

**POWER MODULE**

Locate module plug (3 pin in rear of harness) and connect to module to determine suitable mounting location. Module mounts to frame with Black tie strap (in kit). After mounting module, cover W/BE wire with PVC (provided in kit) and route wire to exit with R & Y wires (from harness) to be connected to a suitable key switch as shown.

**\*(Optional) Indicator Wires (added from kit)**  
 BN & V - right and left turn  
 GN/Y - oil pressure light  
 TN/GN- neutral light  
 O/W - 12V ACC. Power  
 W - spliced to white hi-beam wire

For rear coil mounting: route GY through main harness PVC and pull out to rear of harness.

\* Indicates optional harness functions with wires installed from kit.