

WP374

2004 ONLY

Plug #1

- #1 BE/R Lights in from key
- #2 W Ign. and Acc. in from key
- #3 GY Ignition out
- #4 BE Lights out
- #5 O/W Accessory out
- #6 BK/R Start input (ground signal)
- #7 GN/V Compression release
- #8 W/BK Ignition output

Plug #2

- DT8 SOCKET
- #1 BE Lights in from power module
- #2 GY Ign. in from power module
- #3 OR/W Acc. in from power module
- #4 BN Right front directional
- #5 W/BN Right turn input
- #6 W/R Run switch input
- #7 W High beam output
- #8 Y Low beam output
- #9 W/Y Hi/lo switch
- #10 W/V Left turn input
- #11 BK/Y Horn input
- #12 V Left front directional

Plug #3




- DT6 SOCKET
- #1 BN/R Right rear directional
- #2 V/R Left rear directional
- #3 Y/BK Horn out
- #4 W/OR Brake input
- #5 W/BK Ignition output
- #6 NOT USED

RED 29 Speed sensor

RED 32 Annunciator

RED 50 Speedometer


30 amp Breaker

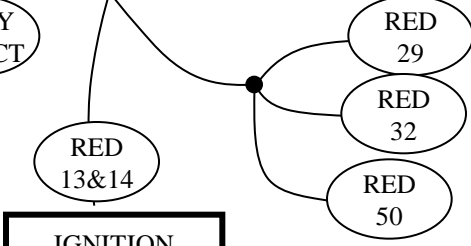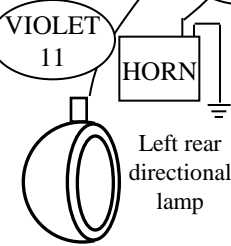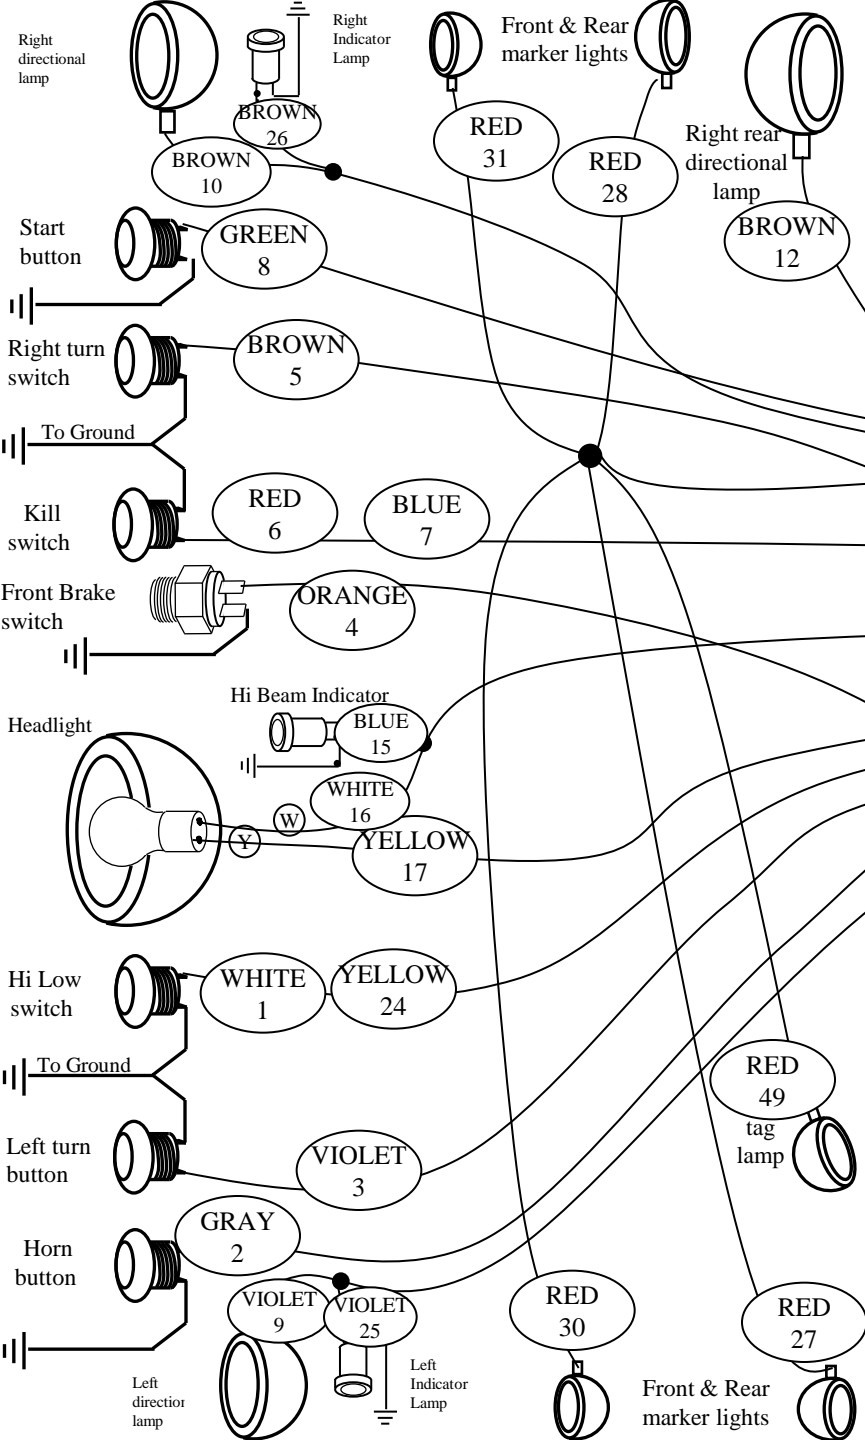

WP374

2005+

30 amp Breaker

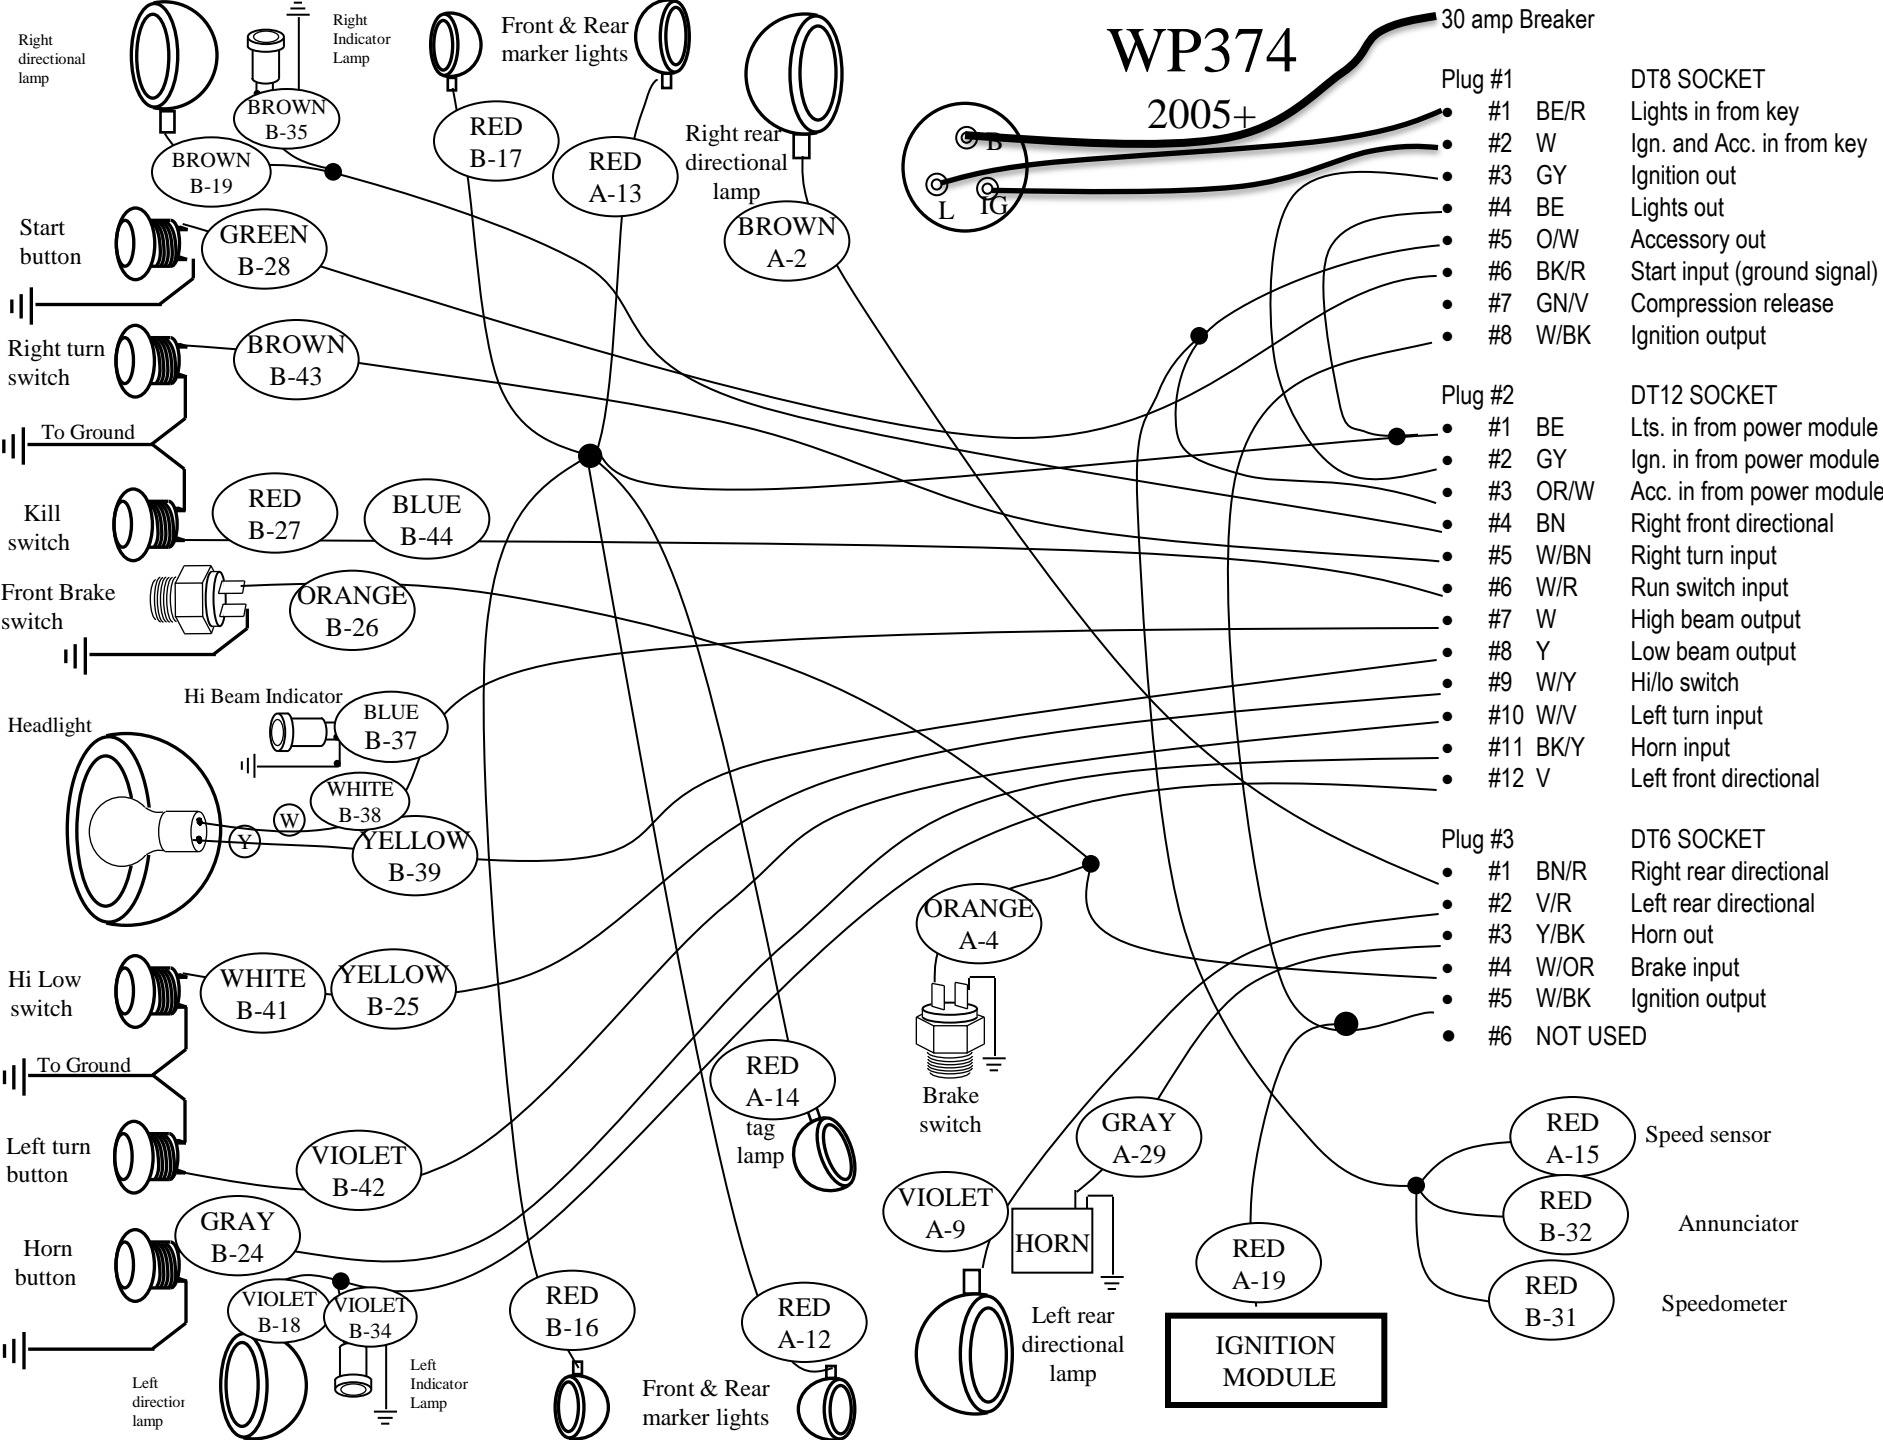

- RED A-15 Speed sensor
- RED B-32 Annunciator
- RED B-31 Speedometer